

- Members May connect a generator using any UL-approved open-transition transfer switch.
   An open transition transfer switch breaks the circuit connection to FEC's service wires before making the circuit with the member's generation. FEC prefers installation of an automatic transfer switch (ATS).
- Member generator installations must meet all local, municipal, National Electrical Safety Code (NESC), National Electric Code (NEC), and National Fire Protection Association (NFPA) regulations.
- 3. FEC reserves the right to disconnect or refuse service to any generator installation which violates said regulations.

DATE: 3/20/2025



## **New Service - Generator Transfer Switch**

Phone (979) 968-3181 1-866-968-3181

MS-72